

1 / 19

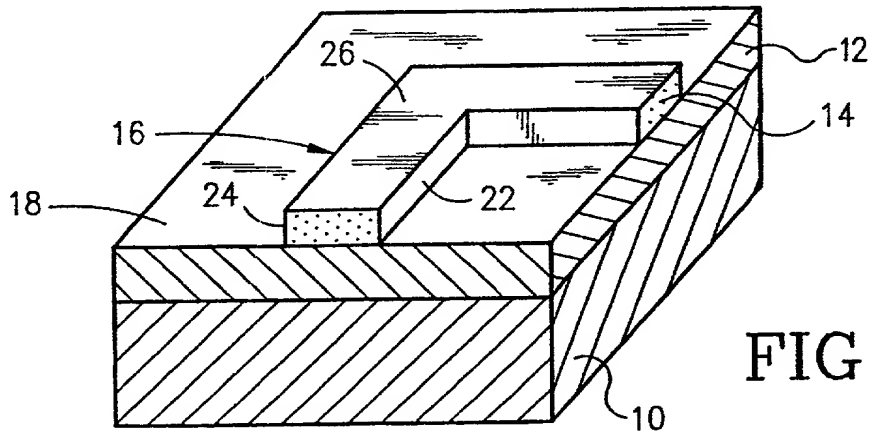


FIG. 1

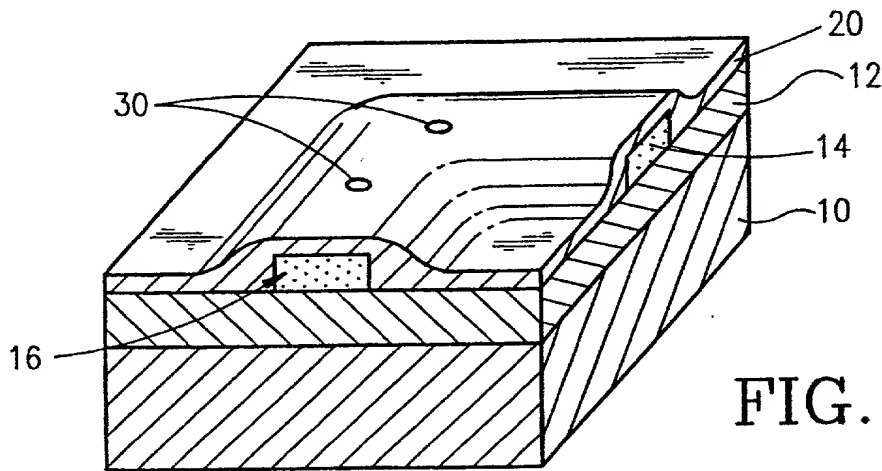


FIG. 2


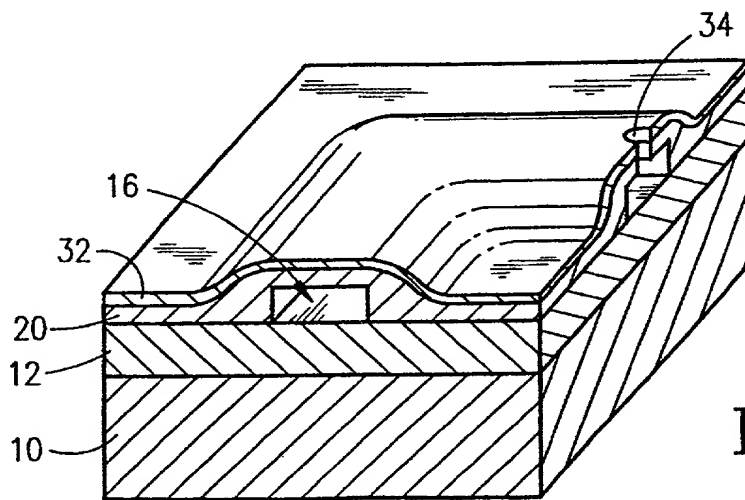



FIG. 3

0905027.071001


2/19

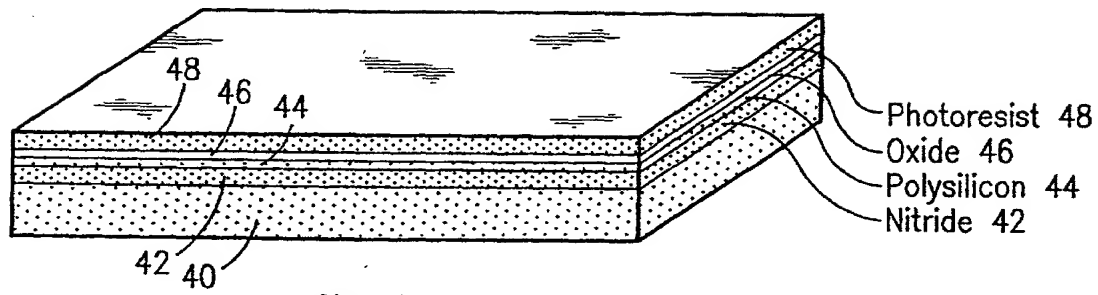


Step 1.

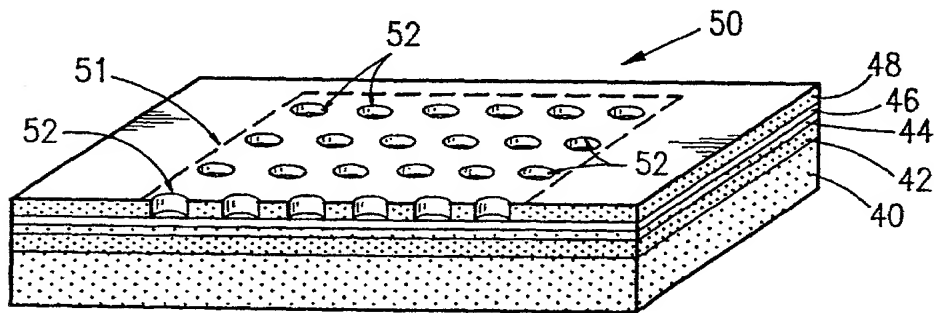

Step 2.

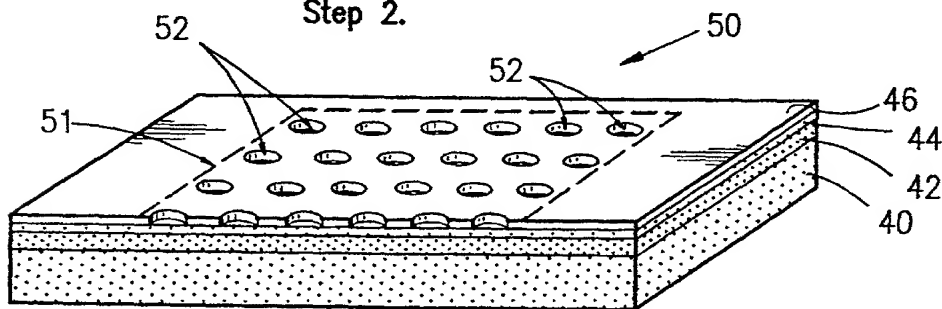

Step 3.

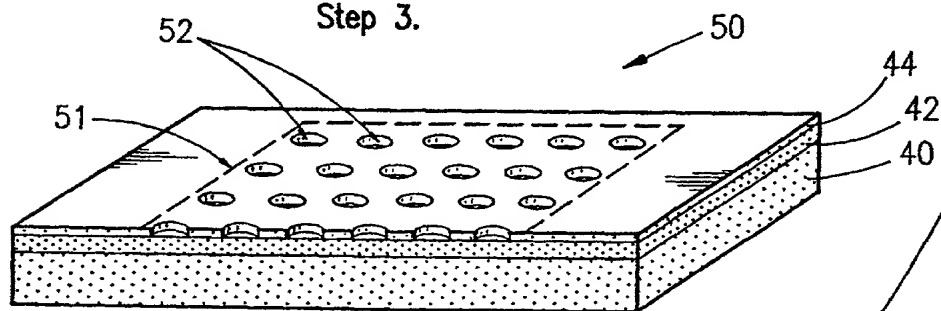

Step 4.

FIG. 4(a)

3/19

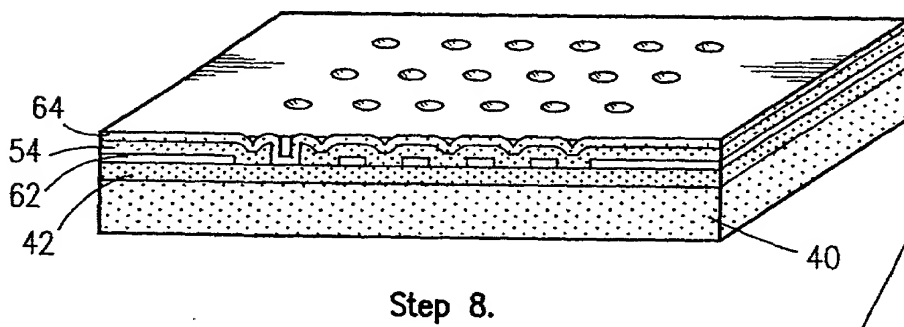
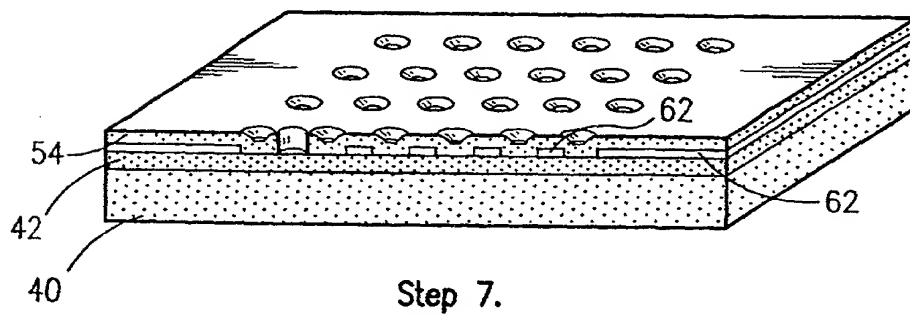
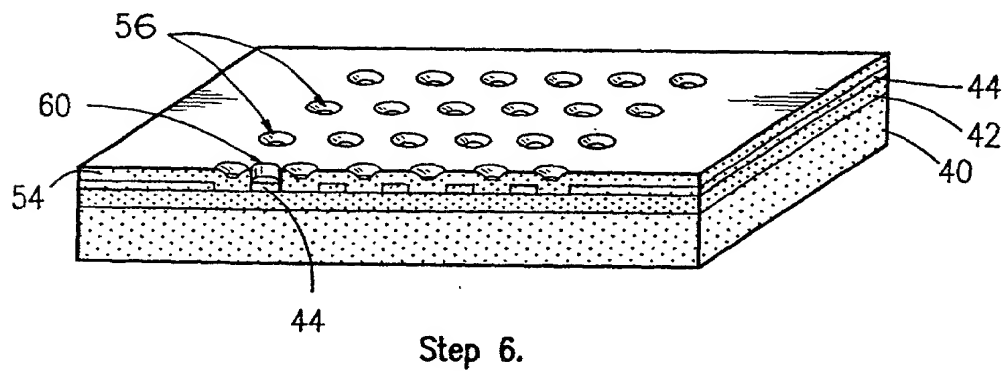
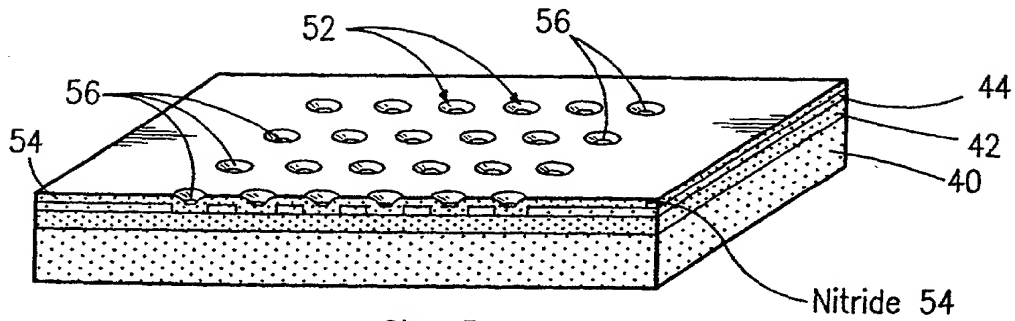


FIG.4(b)

TOE120" / 2050660

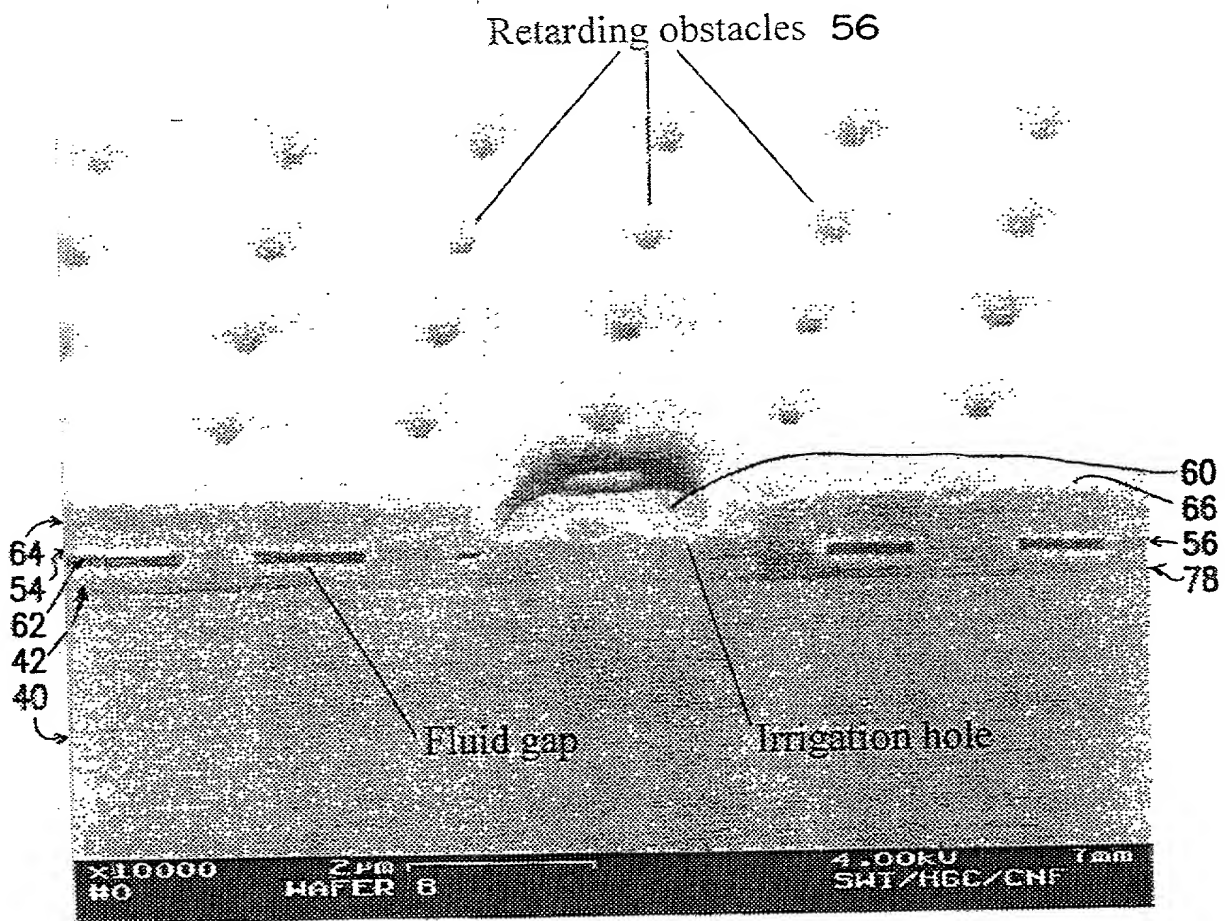


FIG. 5A

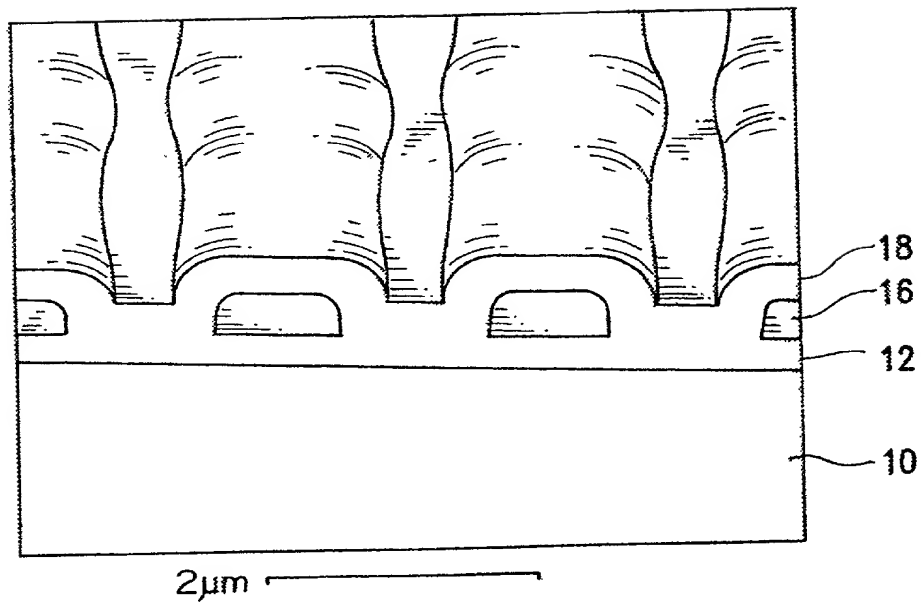


FIG. 5B

FIG. 6(a)

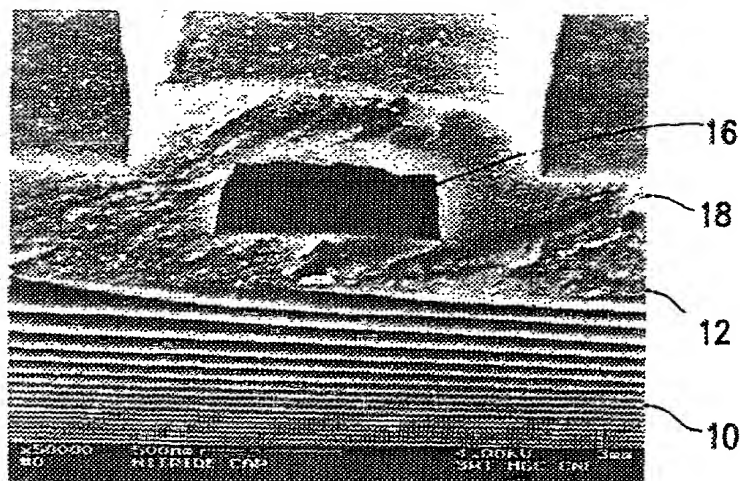


FIG. 6(b)


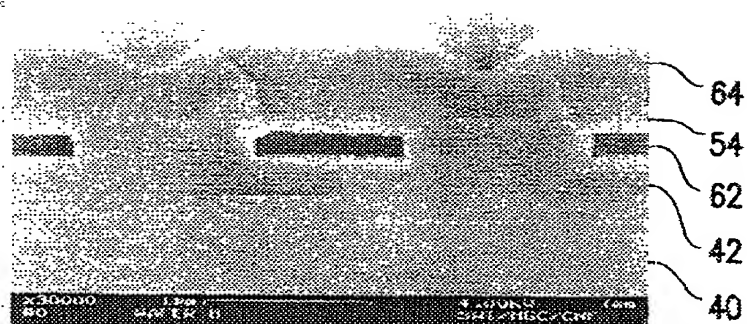


FIG. 6(c)

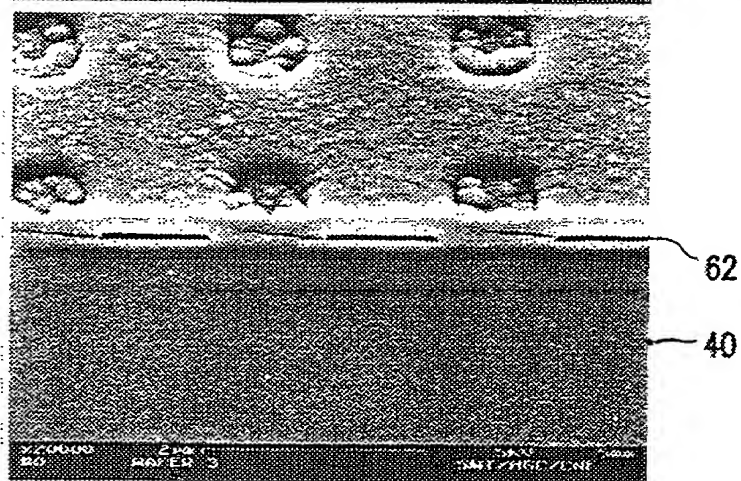

TOE170" / 2050660



FIG. 8A



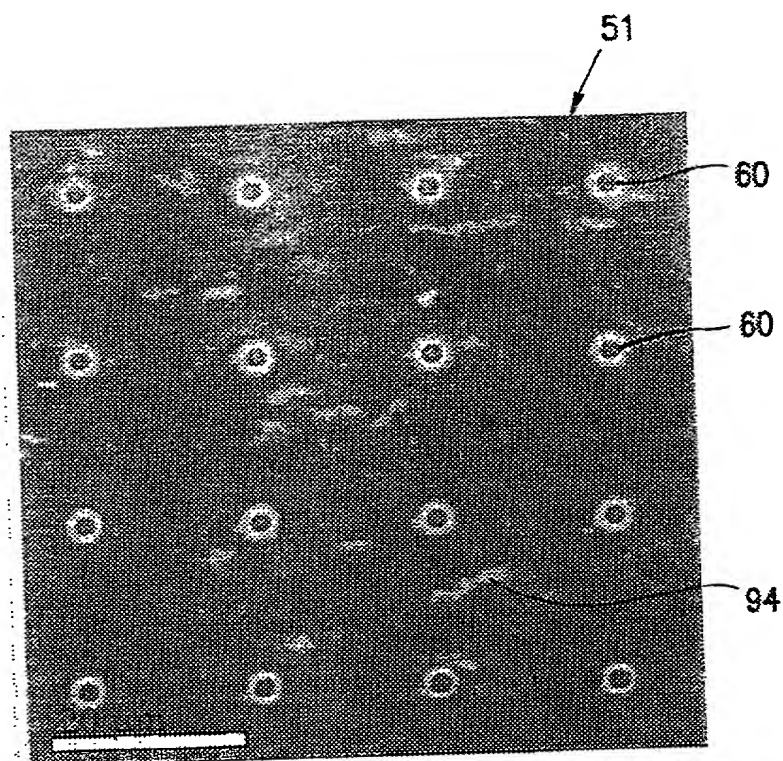


FIG. 8B

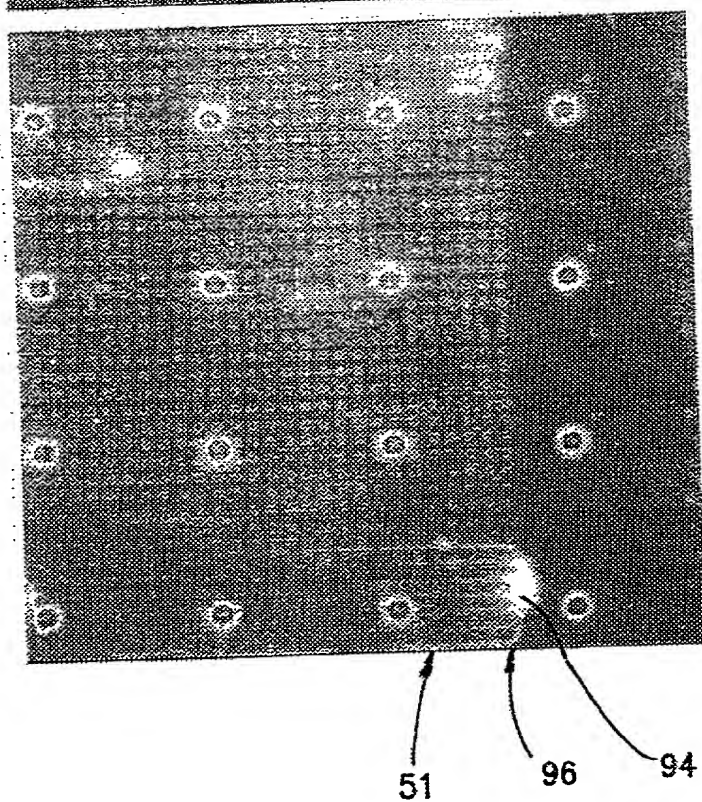

8/19

FIG. 9

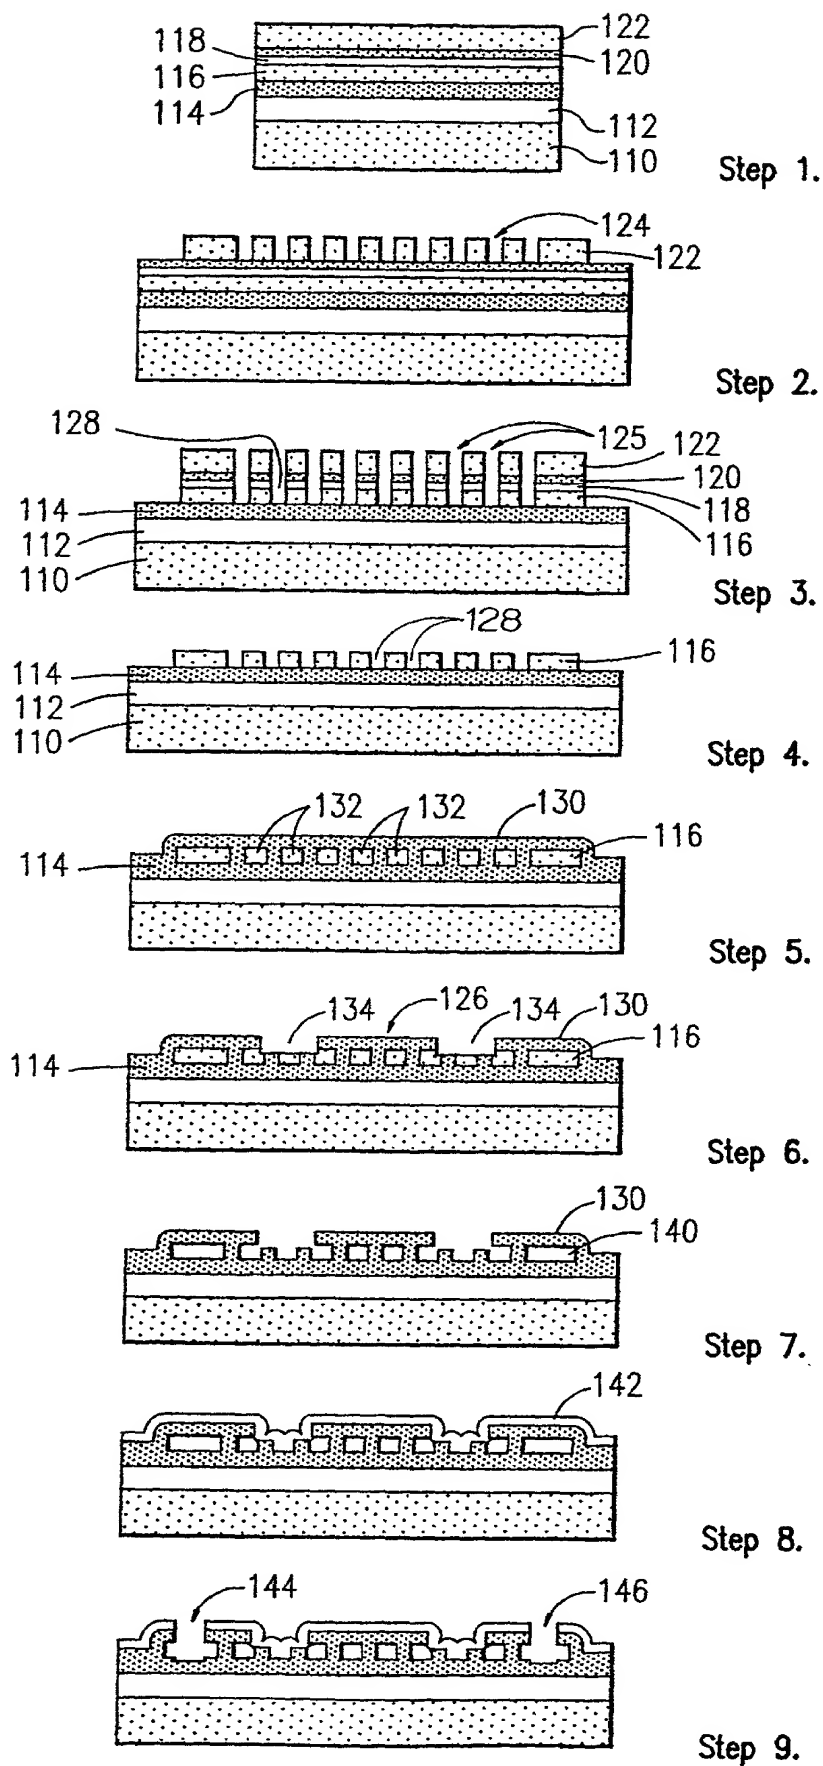



9/19

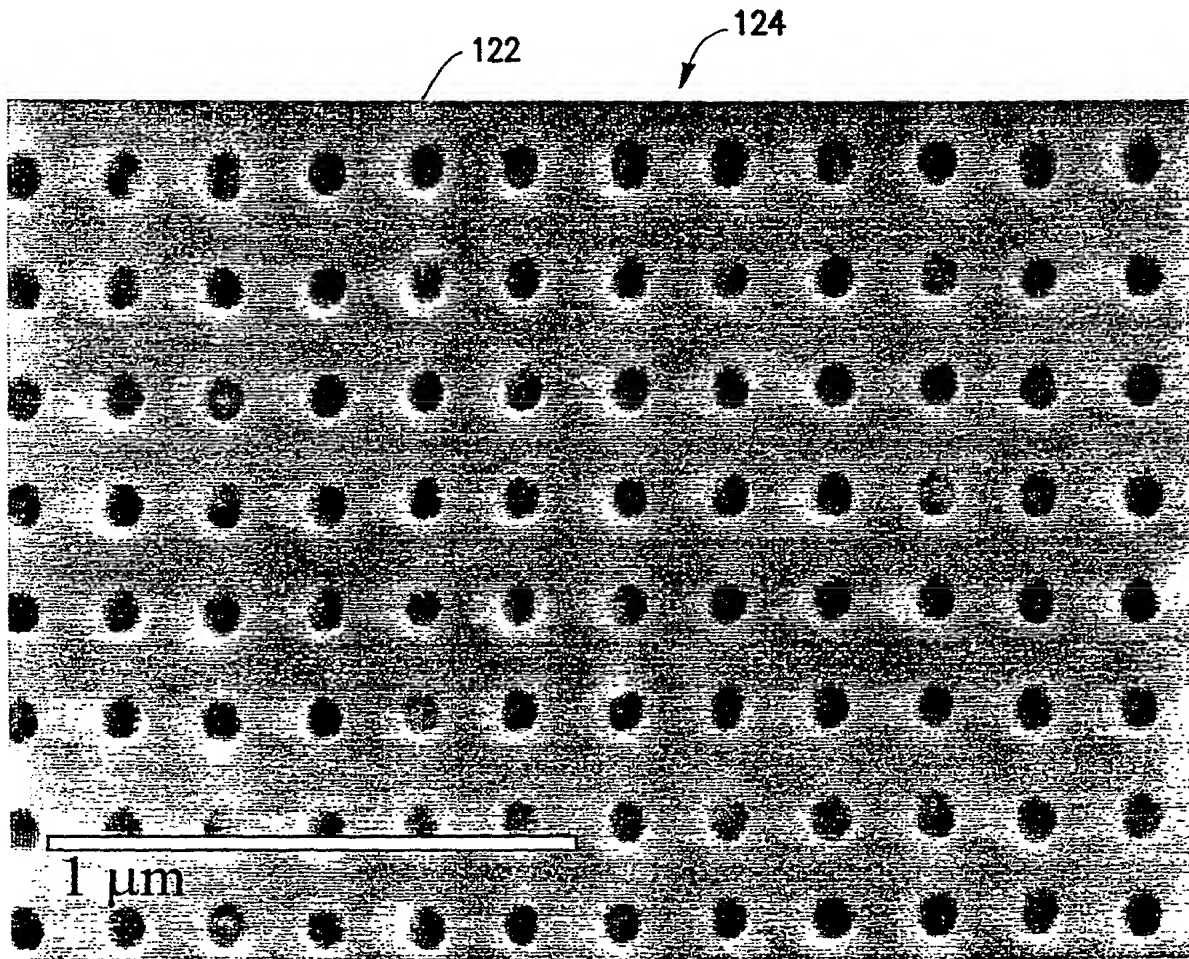


FIG. 10

0905007 07101

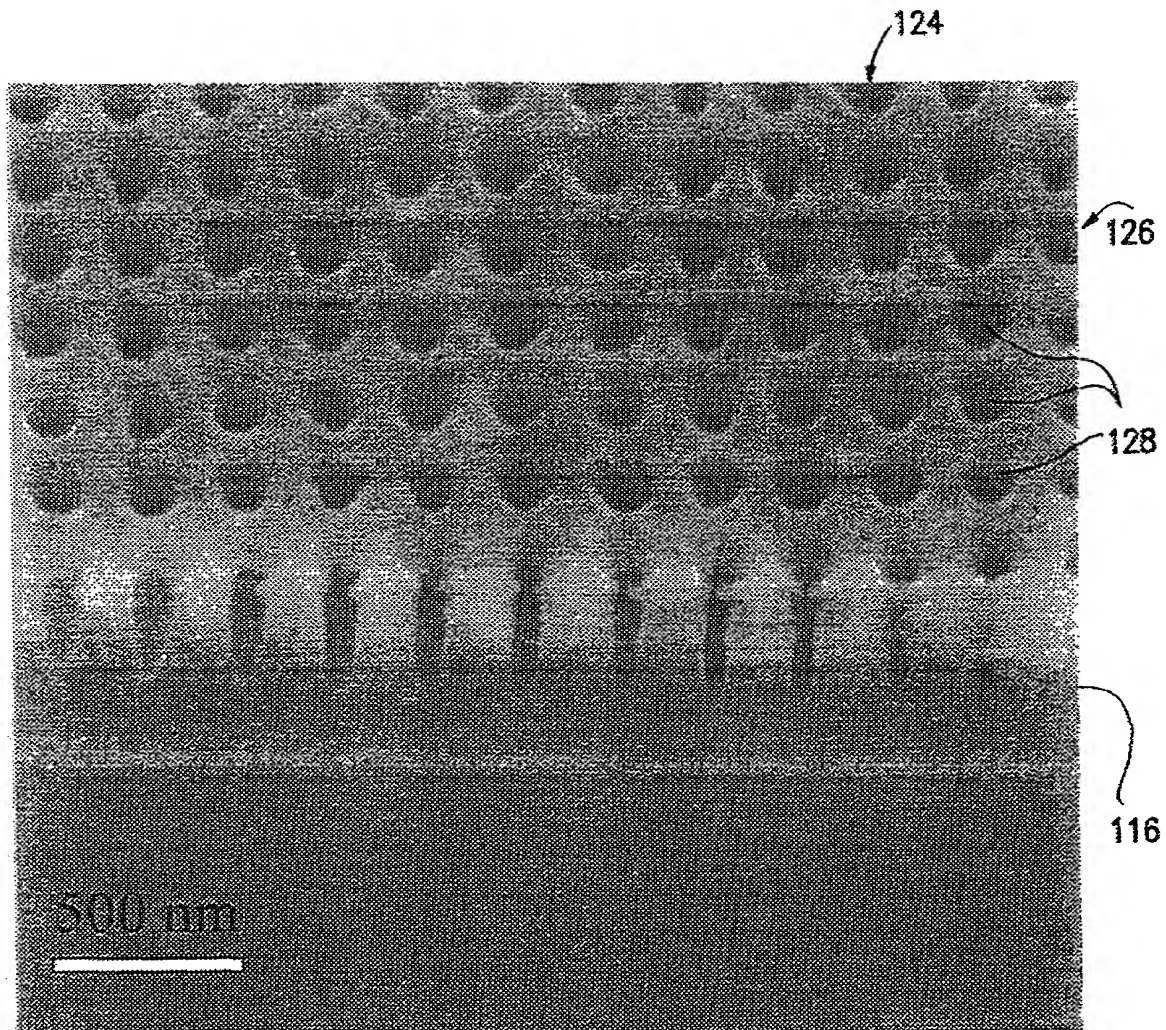


FIG. 11

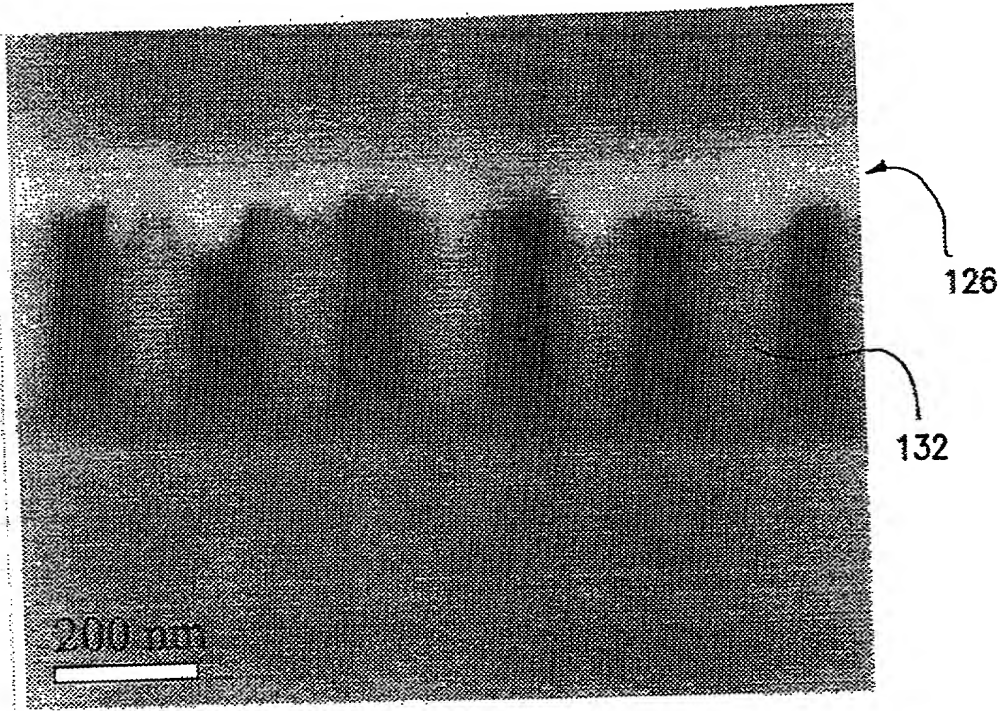


FIG. 12A

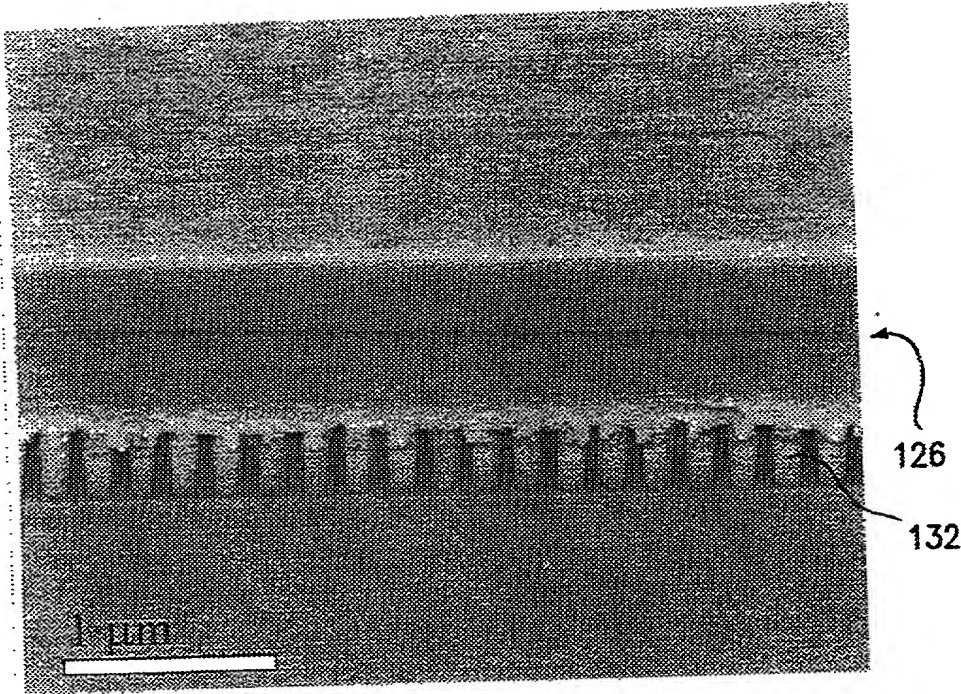


FIG. 12B

09905027.071301

12/19

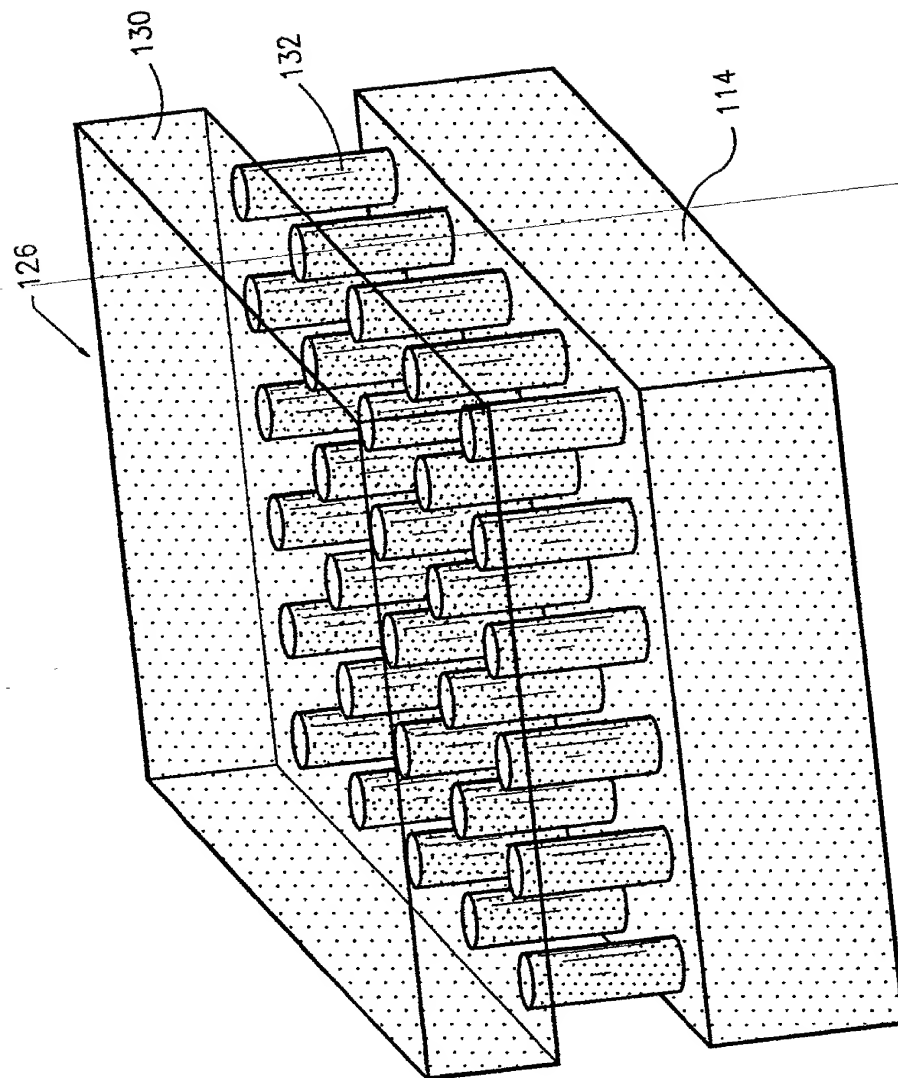


FIG. 12C

10ET20" 2050660

13/19

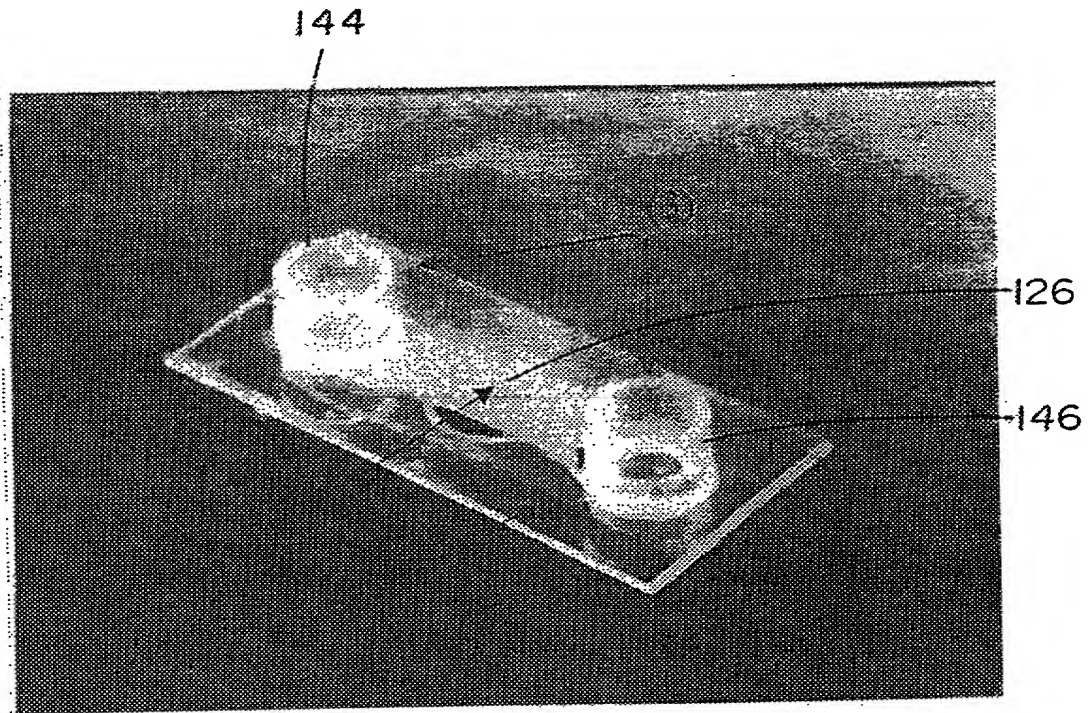


FIG. 13

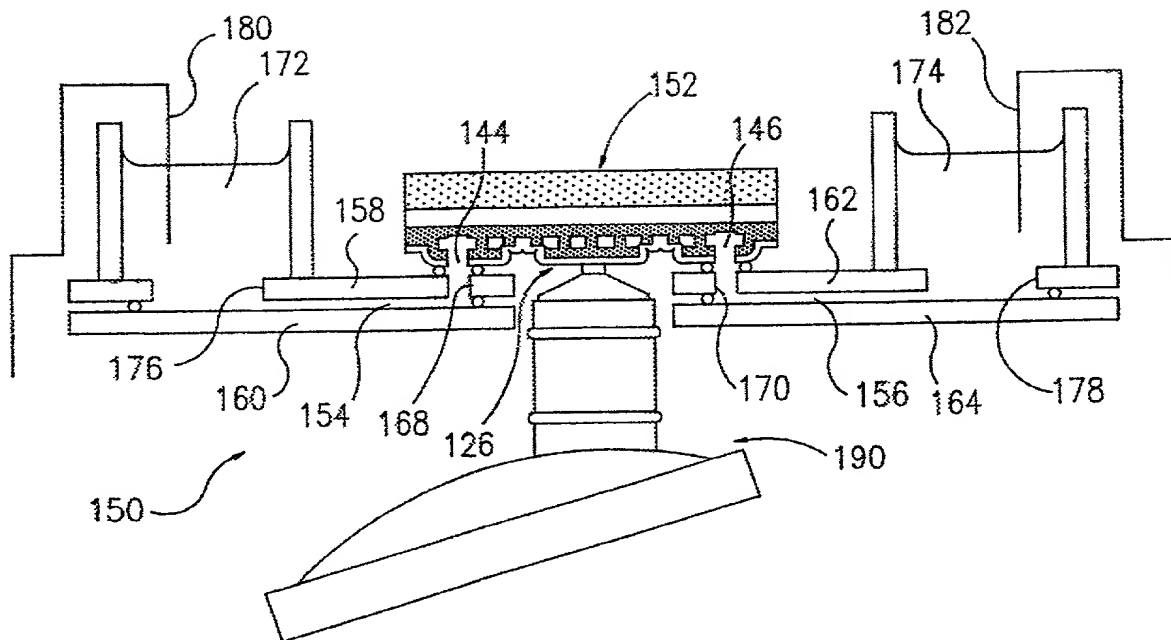


FIG. 14

14/19

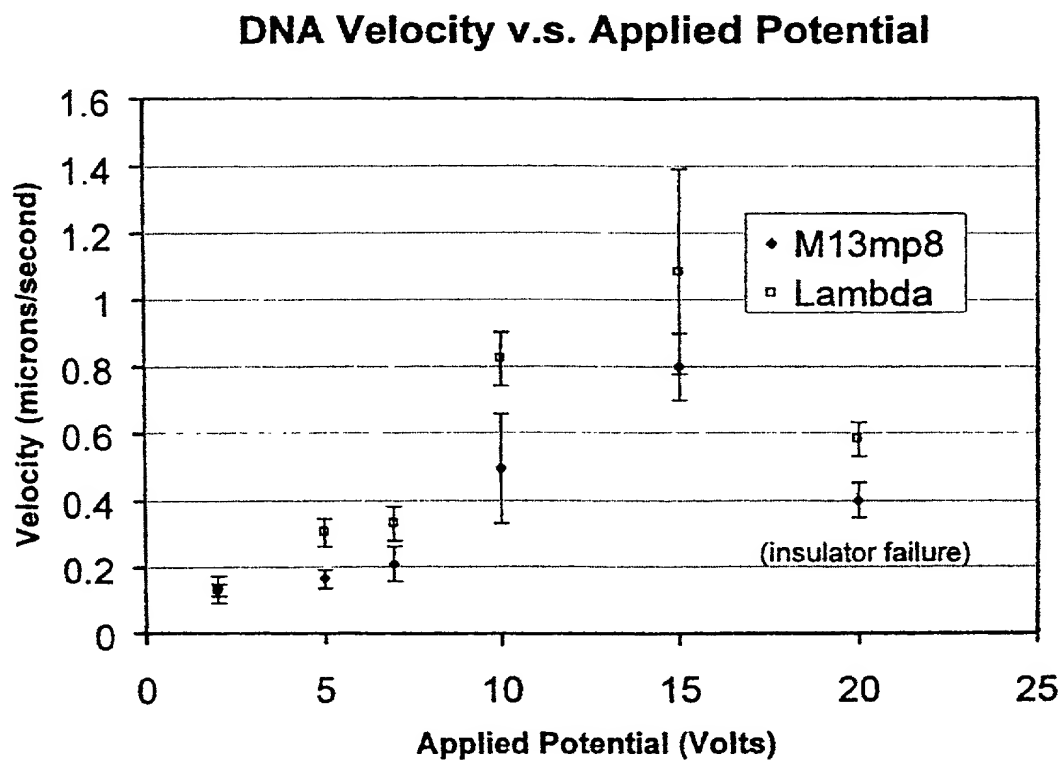


FIG. 15

15/19

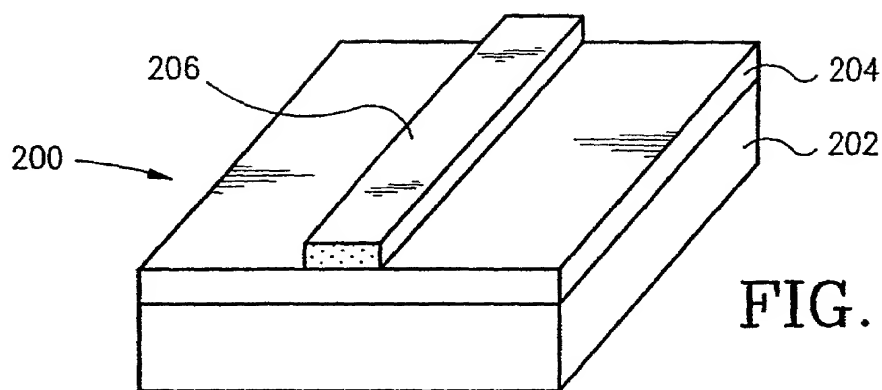


FIG. 16

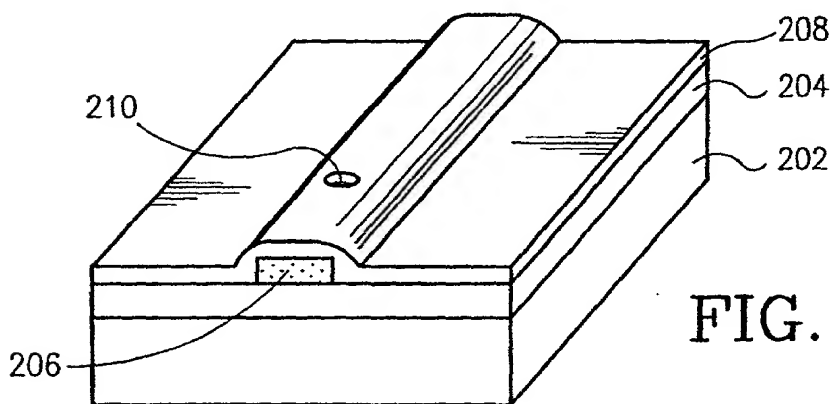


FIG. 17

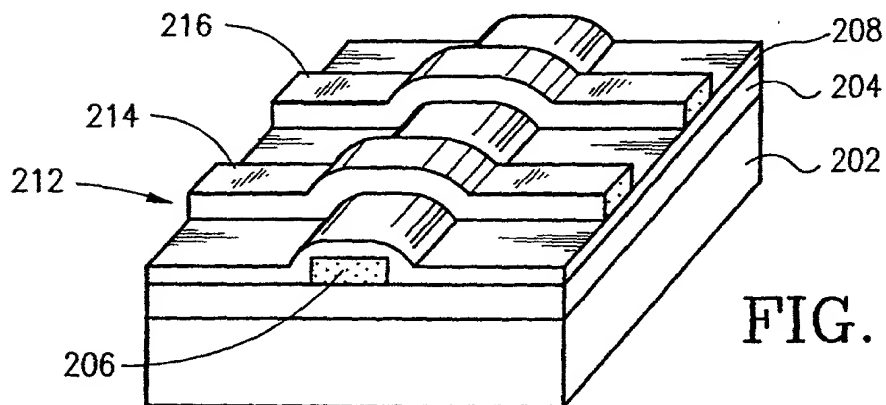


FIG. 18

04905027.01301



16 / 19

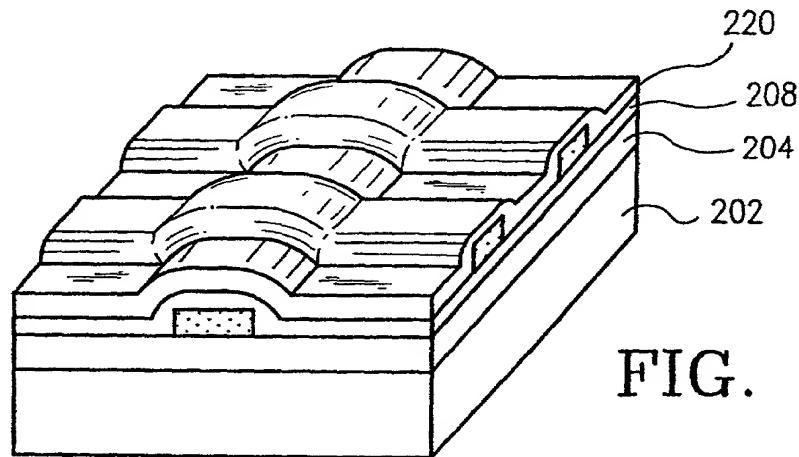


FIG. 19

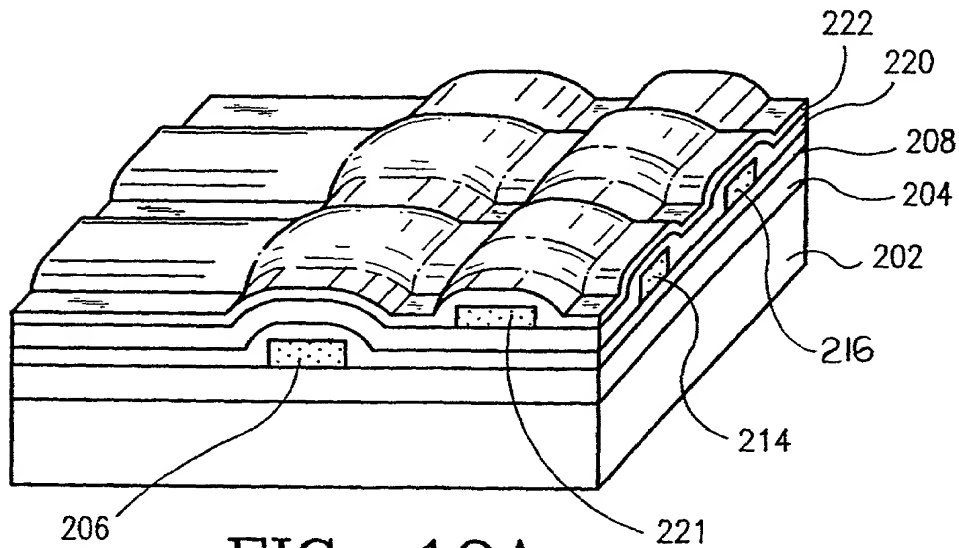


FIG. 19A

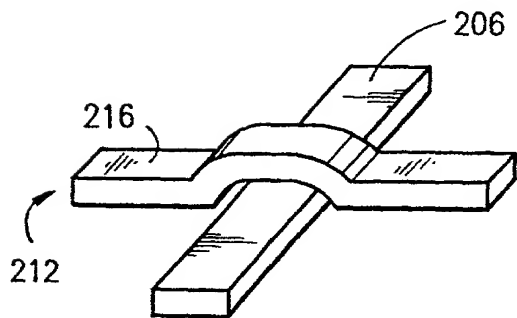


FIG. 20

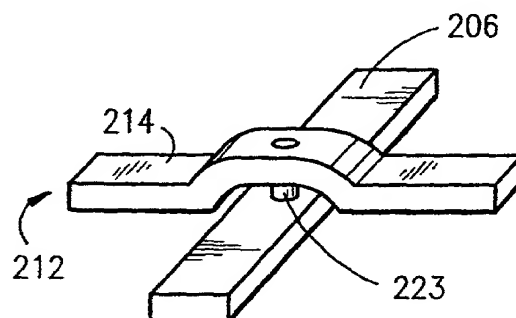


FIG. 21

09405027.071301



17/19

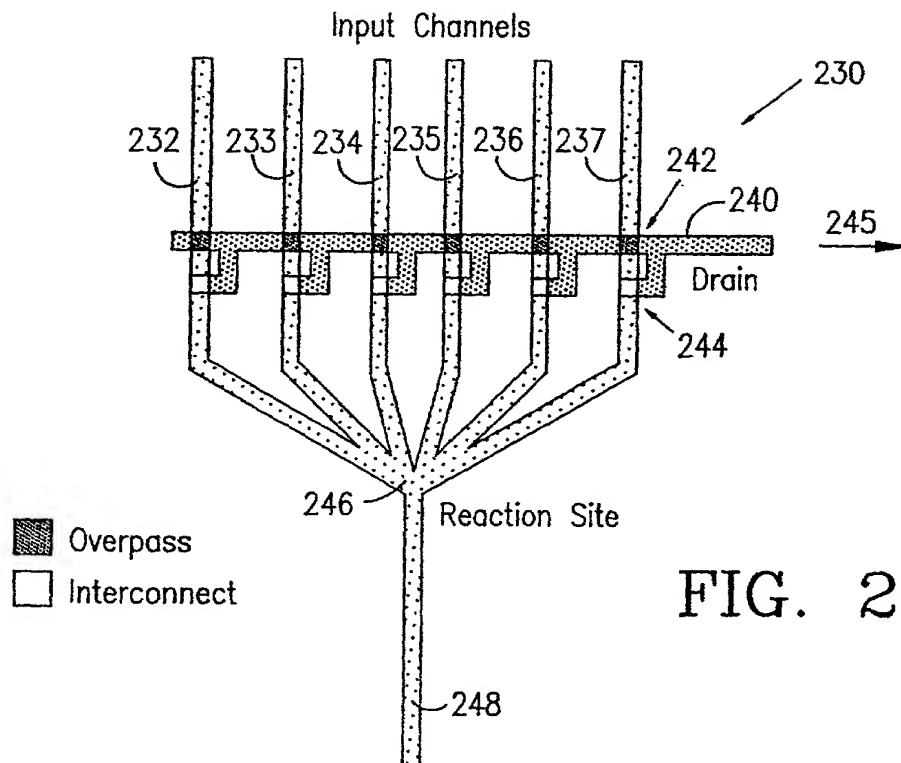


FIG. 22

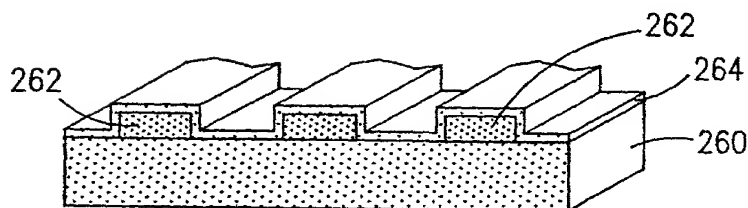


FIG. 23

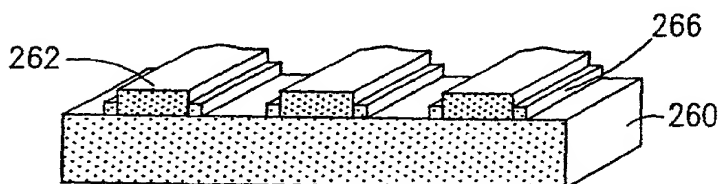


FIG. 24

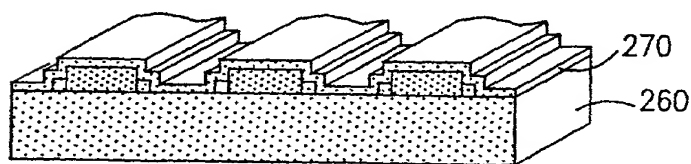


FIG. 25

09905027.07301

18/19

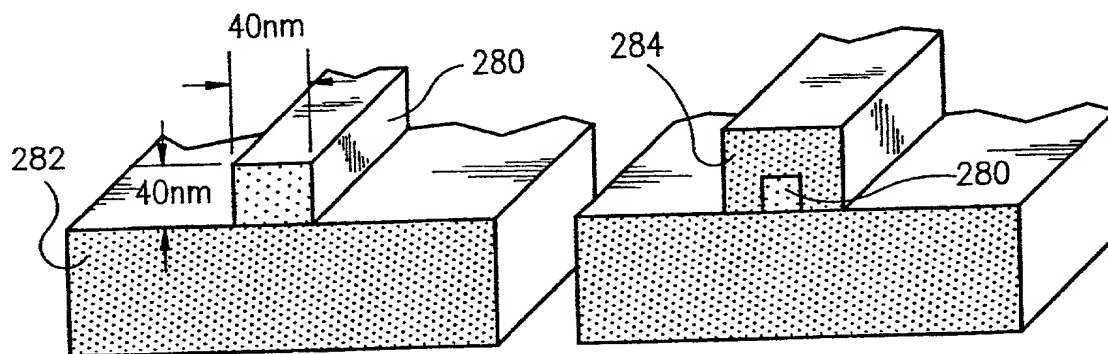


FIG. 26

FIG. 27

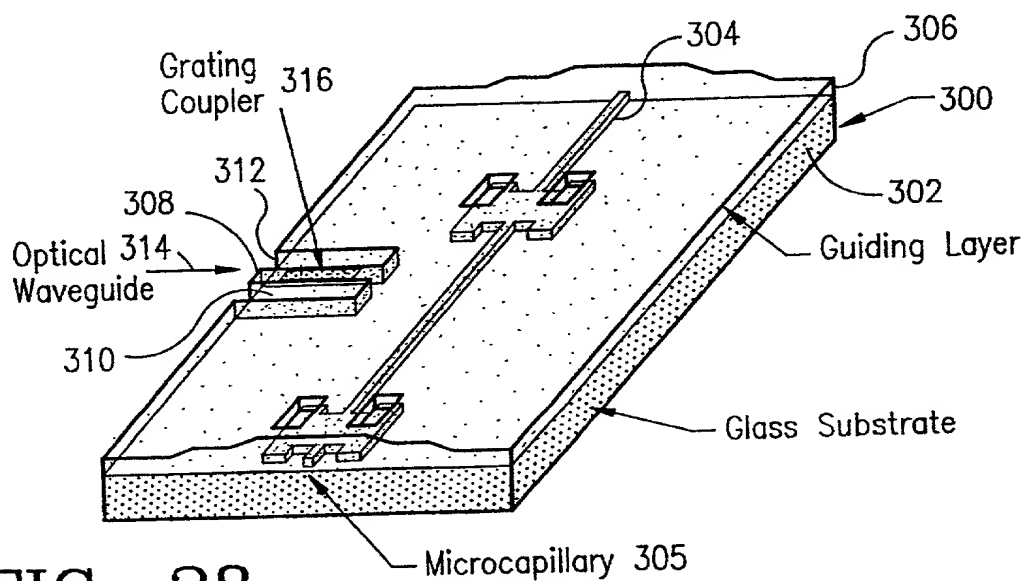


FIG. 28

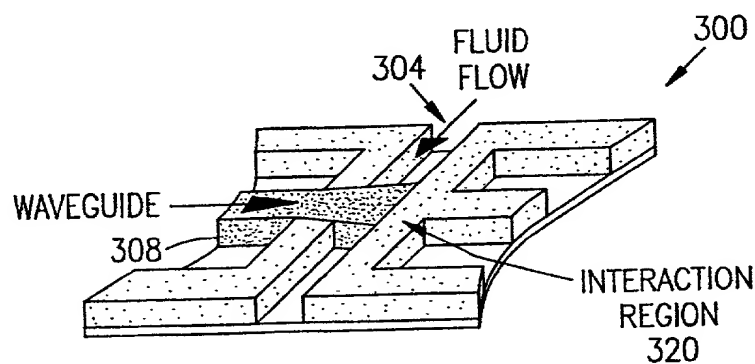


FIG. 29

0905027 01301

19/19

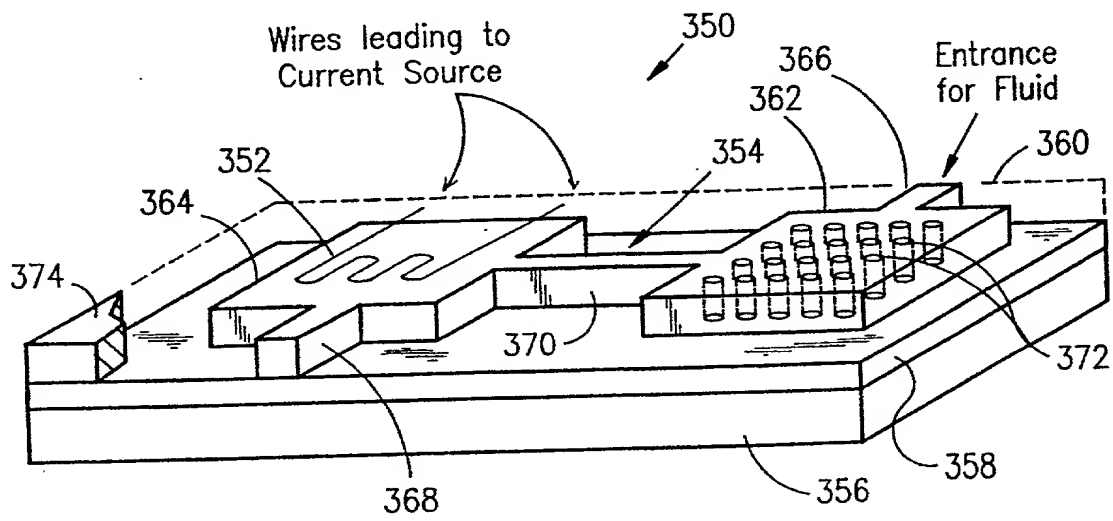


FIG. 30

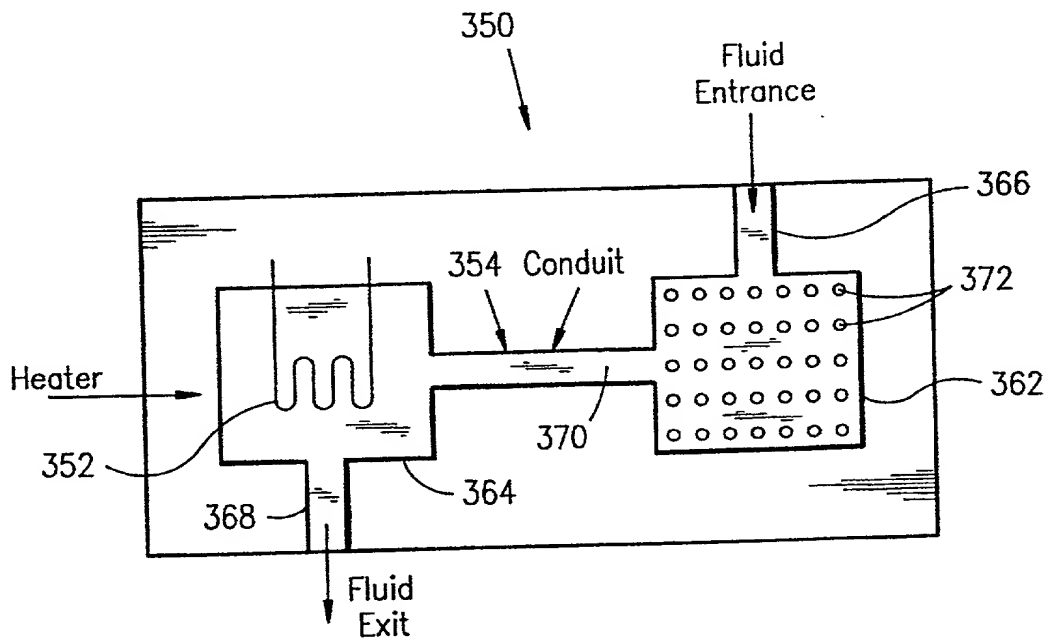


FIG. 31

0905027-071301